


Battery 2 x 12 V

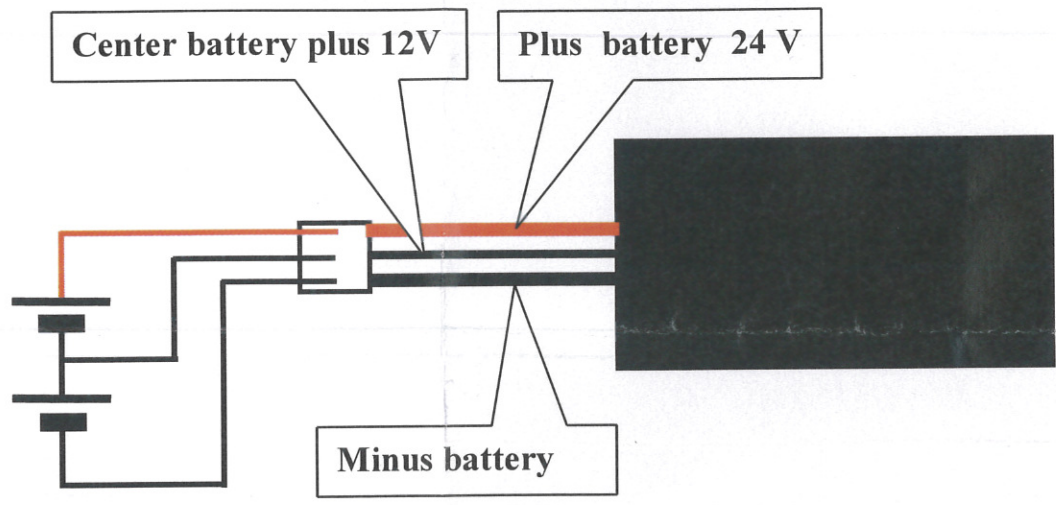

Wiring of starter systém for JCV 360 and battery 2 x 12 V for this systém – type of battery – NICD 1700 mAh

Wiring for charging of battery by external charger.

Step 1—charging half of battery pack—12V

Step 2—charging second half of battery pack—12V

